

# Grande Mesh Back Chair Operating Instructions



## Seat height adjustment

To lower the seat pull the lever upwards whilst still sitting down. To increase the height of the seat raise your body weight off seat whilst pulling lever upwards. Releasing the lever will lock the seat into position.



● *Adjust the seat height so that your feet are resting flat on the floor with thighs horizontal and lower legs vertical.*

## Seat angle adjustment

To change the seat angle pull the lever up whilst sitting on the chair and release. The seat is now free to be adjusted to the desired sitting position. To lock the position of the seat push the lever down.



● *When doing computer work set the seat close to horizontal or slightly back. When writing incline the seat slightly forward.*

## Back angle adjustment

To change the back angle sit on the chair and pull the lever up and release. The back will now move as you lean forward or backwards. When you find the desired position push the lever down to lock the back into position.



● *Adjust the backrest to give firm support while sitting upright*

## Back height adjustment

This chair is supplied with a ratchet height adjustment system for the back. To raise the back height, lift the back to the desired height and it will lock automatically. To lower the back, lift the back to highest point to disengage and lower the back to the bottom position to re-set the ratchet mechanism.

● *Adjust the height of the back in conjunction with the sliding lumbar support to a position where the lumbar region of your back is supported when you lean back*

## Sliding Lumbar Support

The Lumbar Support is found on the inside on the mesh back accessible from the outside of the back. Using both hands slide the Lumbar Support up or down to the desired position.

## Arm Height Adjustment

The arm height can be adjusted to 6 positions. Pull the handgrip on the outside of the arm up to release and move the arm up or down to desired position. Release the handgrip to lock.

● *Your forearms should be as close to horizontal as possible when working at a desk.*

## Fabric care information

Regular care - Vacuum regularly using low suction. Protect from direct sunlight.

Spot Cleaning - Treat spills and stains as soon as possible. Gently scrape any soil or mop any liquid from the surface of the fabric. Do not saturate with water or other cleaning liquids

Do not remove any part for separate cleaning. Do not wash. Do not use solvents. Professional cleaning recommended using on site dry clean or hot water extraction. Use of inappropriate care products may cause damage and invalidate your warranty.

**FOR MORE INFORMATION VISIT OUR WEBSITE**

**[www.woodsurniture.com.au](http://www.woodsurniture.com.au)**

AFRDI approved for users up to 135 kg - Multiple shift operations.



Approved only when certification is current (see [www.furntech.org.au](http://www.furntech.org.au) for an up-to-date list of certified product) and when supplied in accordance with the AFRDI Blue Tick agreement No. A525 and Certificate No. 11815/1.

"The foam and mesh on this chair comply with the ignitability/flammability requirements of AS/NZS 4088.1"

**WOODS FURNITURE PTY LTD**

**564 Geelong Road, Brooklyn, Vic. 3012**

**PHONE : 1800 004 555 FAX : 1800 776 500**